 


2011 **ROGUE**

QUICK REFERENCE GUIDE



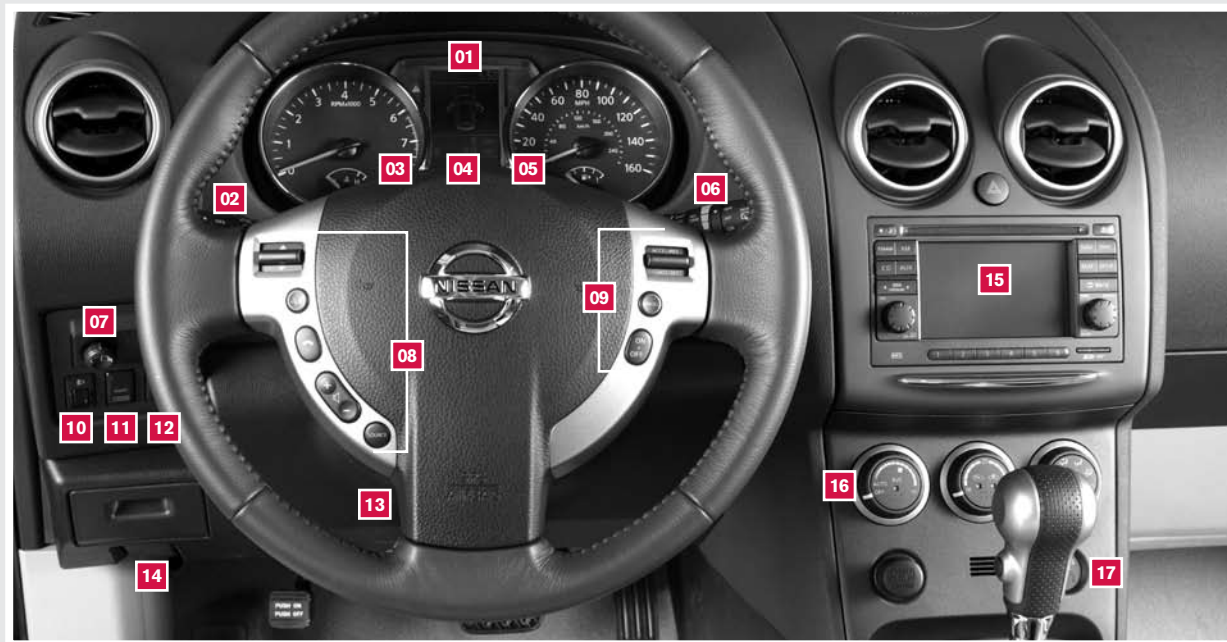

- | | | | |
|---|--|---|---|
| 01 VEHICLE INFORMATION DISPLAY* | 06 WINDSHIELD WIPER / WASHER SWITCH | 10 HEADLIGHT AIMING CONTROL* | 14 HOOD RELEASE* |
| 02 HEADLIGHT AND TURN SIGNAL CONTROL | 07 OUTSIDE MIRROR CONTROL SWITCH | 11 AWD LOCK SWITCH* | 15 AUDIO AND NAVIGATION SYSTEM |
| 03 LOW TIRE PRESSURE WARNING LIGHT | 08 STEERING WHEEL SWITCHES FOR AUDIO / BLUETOOTH* | 12 VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH* | 16 AUTOMATIC CLIMATE CONTROLS |
| 04 INSTRUMENT BRIGHTNESS CONTROL SWITCH* | 09 CRUISE CONTROL | 13 STEERING WHEEL TILT ADJUSTMENT* | 17 FRONT PASSENGER AIR BAG STATUS LIGHT* |
| 05 TRIP CHANGE BUTTON* | | | |

*See your Owner's Manual for more information.

NEW SYSTEM FEATURES

USB/iPod® Interface (if so equipped) 2
 Navigation System (if so equipped) 2

ESSENTIAL INFORMATION

Loose Fuel Cap 3
 Tire Pressure Monitoring System (TPMS) 3
 Towing Your Vehicle 3

FIRST DRIVE FEATURES

NISSAN Intelligent Key™ System (if so equipped) 4
 Power Seat Adjustments (if so equipped) 4
 Outside Mirror Control Switch 4
 Starting/Stopping the Engine (NISSAN Intelligent Key™ models only) . . . 5
 Headlight Control Switch 5
 Windshield Wiper Switch 5
 Automatic Climate Controls (if so equipped) 6
 FM/AM/XM® Radio with CD Player (if so equipped) 7
 Parking Brake 7
 Liftgate Release 8
 Fuel-Filler Door 8

SYSTEM GUIDE

Cruise Control 9
 Bluetooth® Hands-free Phone System (if so equipped) 9



- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **“Safety -- Seats, seat belts and supplemental restraint system (section 1)”** of your Owner’s Manual.



Additional information about your vehicle is also available in your Owner’s Manual, Navigation System Owner’s Manual, Electronic Quick Reference Guide (EQRG) and at www.nissanusa.com.



 
This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner’s Manual. The Owner’s Manual contains more detailed information to help you better understand the important safety warnings, features, operation and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation.

new system features

USB/IPOD® INTERFACE (if so equipped)

- The USB jack is located in the center console under the arm rest.
- When a compatible USB memory device or iPod® is plugged into the USB jack **01**, compatible audio files stored on the device can be played through the vehicle's audio system.

For more information, refer to the “Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)” of your Owner's Manual.

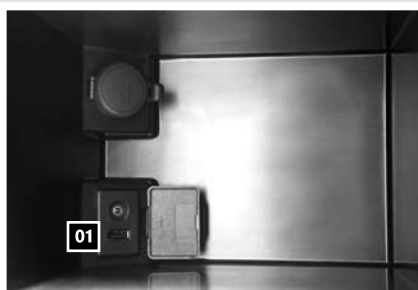


NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

For more information, refer to your Navigation System Owner's Manual.

LOOSE FUEL CAP

 
- A LOOSE FUEL CAP warning message will display in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light SERVICE ENGINE SOON may illuminate.

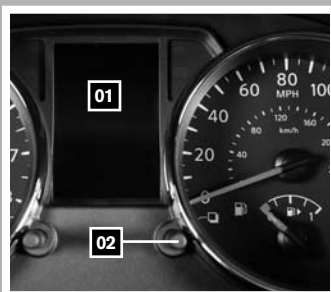

For more information, refer to the **"Instruments and controls (section 2)"** and the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

TIRE PRESSURE MONITORING SYSTEM (TPMS)

 - A CHECK TIRE PRESSURE warning message will display in the vehicle information display **01** and the TPMS light will illuminate when one or more tires are low on pressure and air is needed.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25km/h) and the warning and indicator light will disappear.
- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in all four tires.

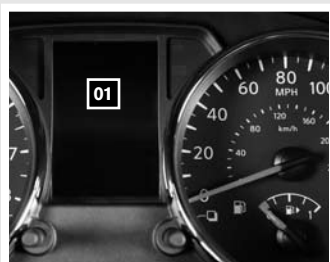

For more information, refer to the **"Instruments and controls (section 2)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.

TOWING YOUR VEHICLE

- For proper towing and to avoid accidental damage to your vehicle, NISSAN recommends that a service operator tow your vehicle after carefully reading the Owner's Manual precautions.

For more information, refer to the **"In case of emergency (section 6)"** of your Owner's Manual.

first drive features

 
NISSAN INTELLIGENT KEY™ SYSTEM (if so equipped)

The NISSAN Intelligent Key™ System allows you to lock or unlock your vehicle, open your liftgate and start the engine.

- To lock or unlock a door, push any door handle request switch **01** once.
- Push any door handle request switch **01** within 5 seconds of unlocking the door and all other doors will unlock.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

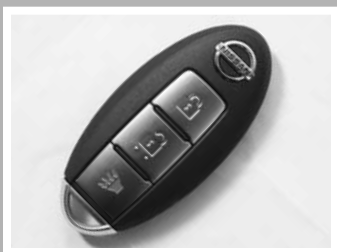


POWER SEAT ADJUSTMENTS (if so equipped)

- Push the control switch **01** forward or backward to slide the seat forward or backward.
- Push the switch **02** forward or backward to adjust the angle of the seatback.

SEAT LIFTER (if so equipped for driver’s seat)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **01** up or down.

 For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

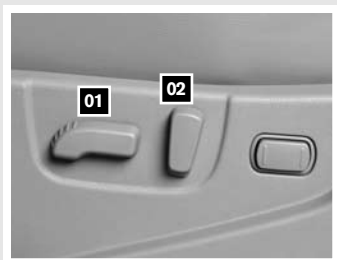

OUTSIDE MIRROR CONTROL SWITCH

- Turn the control switch right or left to select the right or left side mirror.
- Move the control switch up, down, right or left to adjust the mirror angle.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



STARTING/STOPPING THE ENGINE (NISSAN Intelligent Key™ models only)

- Depress the brake pedal.
- Push the ignition switch in.
- Confirm the Intelligent Key system warning light is illuminated green.
- Turn the ignition switch to **START**.



TURNING THE ENGINE OFF

- Move the shift lever to the P (PARK) position, apply the parking brake and turn the ignition switch to the **LOCK** position.

 
For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.



HEADLIGHT CONTROL SWITCH


- Turn the headlight control switch **01** to the  position to turn on the front parking, side marker, tail, license plate and instrument panel lights.
- Turn the switch **01** to the  position to turn on the headlights.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

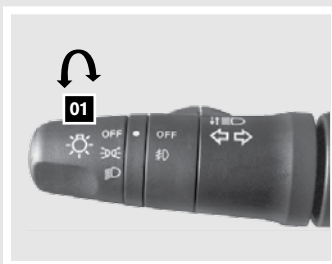


WINDSHIELD WIPER SWITCH

 - Move the lever to the following positions to operate the windshield wipers:
- 01** Intermittent (**INT**) - Front wipers operate intermittently.
 - 02** Low (**LO**) - Front wipers operate at a continuous low-speed.
 - 03** High (**HI**) - Front wipers operate at a continuous high-speed.
 - 04** Rear Wiper (**REAR**) – Twist the end of the lever to operate the first (**INT**) or second (**ON**) speed settings for the rear wiper.

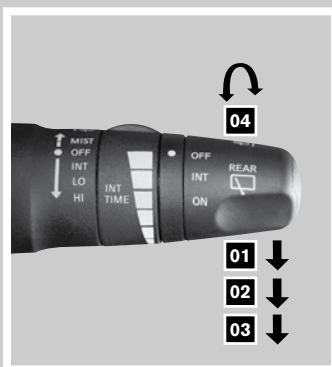


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

 first drive features

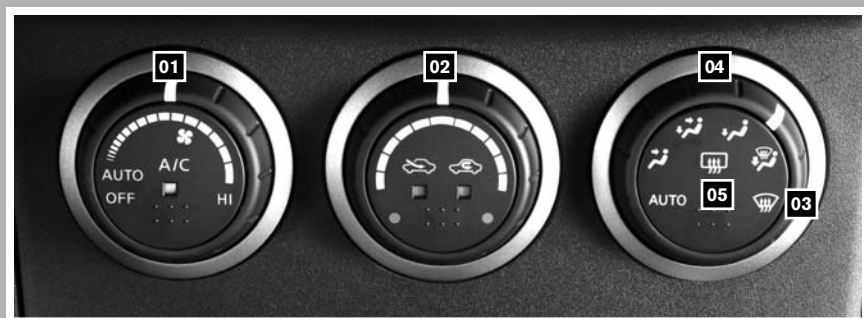


AUTOMATIC CLIMATE CONTROLS (if so equipped)



01 FAN SPEED CONTROL DIAL/A/C BUTTON

 - Turn the fan speed control dial  to the left (low) or right (high) to control fan speed.
- Turn the dial all the way to the left to turn the system off.


02 TEMPERATURE CONTROL DIAL

- Turn the temperature control dial  to select the desired temperature. Turn the control dial to the left for cooler air or right for warmer air.

03 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Turn the air flow control dial  to the front window defroster mode .

05 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window defroster switch  to turn the system on or off.

For more information, refer to the “Instruments and controls (section 2)” and the “Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)” of your Owner’s Manual.



FM/AM/XM[®]* RADIO WITH CD PLAYER (if so equipped)

01 VOL/ON-OFF CONTROL KNOB

- Press the **VOL/ON-OFF** control knob to turn the system on or off.
- Turn the **VOL/ON-OFF** control knob to the right or left to increase or decrease the volume.

02 TUNE/SCROLL/AUDIO KNOB

- To manually tune the radio, turn the **TUNE/SCROLL/AUDIO** knob left or right.

*XM[®] Satellite Radio is only available on vehicles equipped with optional XM[®] satellite subscription service.

For more information, refer to the “**Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

PARKING BRAKE

- To apply, firmly depress the parking brake pedal **01**.




- To release, firmly press the foot brake **02**, then press the parking brake pedal **01** and the parking brake will release.

 


For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

first drive features

LIFTGATE RELEASE

- Unlock the liftgate by pressing the  button on the keyfob twice.

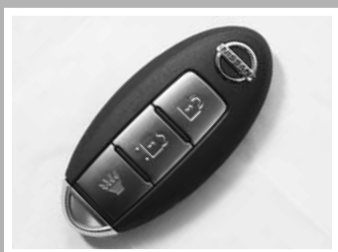

- To open the liftgate, push the liftgate release switch and pull up to open.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



FUEL-FILLER DOOR

- The fuel-filler door is located on the right, rear side of the vehicle.
- To open the fuel-filler door, pull the left side of the door.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.

For more information, refer to the **“Starting and driving (section 5)”** of your Owner’s Manual.



BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.

For more information, refer to the **“Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)”** of your Owner’s Manual or please visit www.nissanusa.com/bluetooth.





Nissan, the Nissan Brand Symbol, "SHIFT_" tagline,
Z and Nissan model names are Nissan trademarks.
© 2010 Nissan North America, Inc.
QR1E 0S35U1
Printing: December 2010 (09)

