


# 2014 **ROGUE**

## QUICK REFERENCE GUIDE



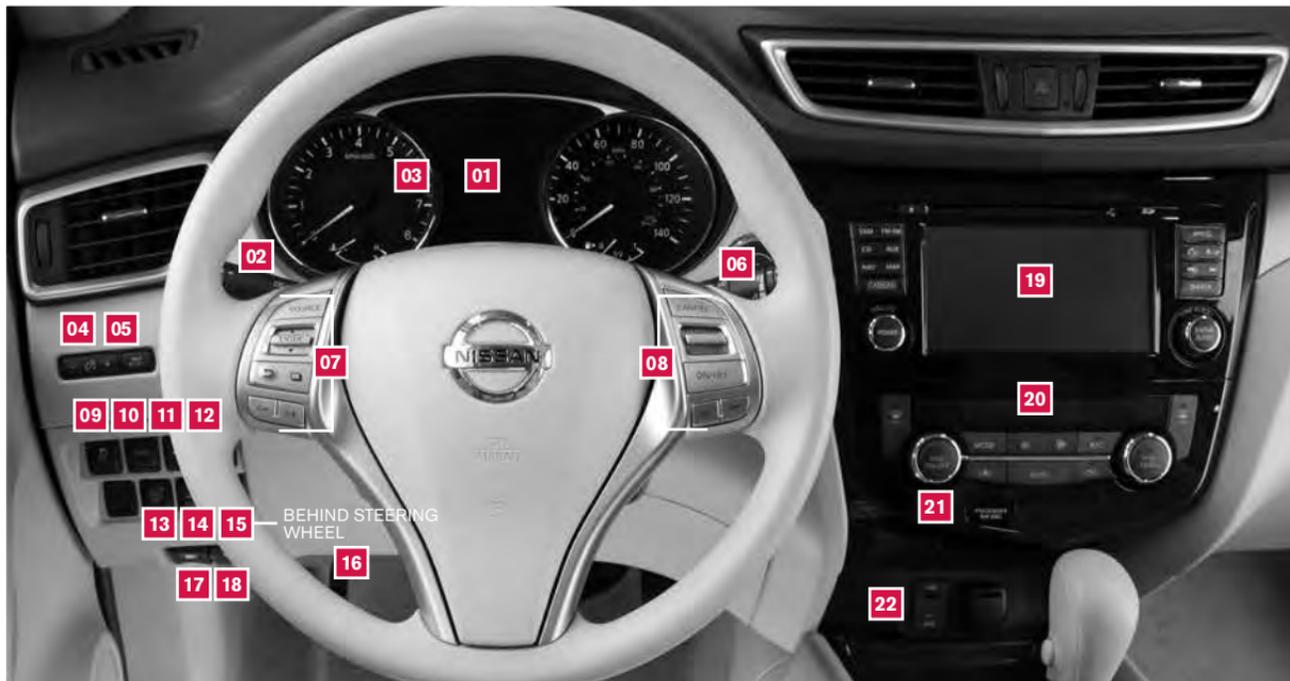

- 01** VEHICLE INFORMATION DISPLAY\*
- 02** HEADLIGHT AND TURN SIGNAL CONTROL
- 03** LOW TIRE PRESSURE WARNING LIGHT
- 04** INSTRUMENT BRIGHTNESS CONTROL SWITCH\*
- 05** TWIN TRIP ODOMETER RESET BUTTON

- 06** WINDSHIELD WIPER / WASHER SWITCH
- 07** STEERING WHEEL SWITCHES FOR AUDIO CONTROL\* / NAVIGATION/ VEHICLE INFORMATION DISPLAY
- 08** CRUISE CONTROL/ BLUETOOTH® SWITCHES
- 09** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH\*

- 10** SPORT MODE SWITCH
- 11** POWER LIFTGATE SWITCH
- 12** POWER LIFTGATE MAIN SWITCH
- 13** SAFETY SHIELD BUTTON
- 14** AWD LOCK SWITCH\*
- 15** HILL DESCENT CONTROL SWITCH
- 16** STEERING WHEEL TILT ADJUSTMENT

- 17** FUEL-FILLER DOOR RELEASE
- 18** HOOD RELEASE\*
- 19** AUDIO AND NAVIGATION SYSTEM
- 20** AUTOMATIC CLIMATE CONTROLS
- 21** FRONT PASSENGER AIR BAG STATUS LIGHT\*
- 22** USB/AUX JACK/POWER OUTLET

\*See your Owner's Manual for information.

**NEW SYSTEM FEATURES**

Around View® Monitor with Moving Object Detection (MOD) (if so equipped) . . . . . 2  
 Sport Mode . . . . . 3  
 Blind Spot Warning (BSW) System (if so equipped) . . . . . 3  
 Lane Departure Warning (LDW) System (if so equipped) . . . . . 4  
 Forward Collision Warning (FCW) System (if so equipped) . . . . . 4  
 Hill Start Assist (HSA) System . . . . . 4  
 Hill Descent Control (HDC) System (if so equipped) . . . . . 4

**ESSENTIAL INFORMATION**

Tire Pressure Monitoring System (TPMS) with Easy Fill Tire Alert . . . . . 5  
 Loose Fuel Cap . . . . . 6  
 Fuel-filler Door . . . . . 6  
 Towing Your Vehicle . . . . . 6  
 Outside Temperature Display . . . . . 7  
 Divide-N-Hide® Adjustable floor (if so equipped) . . . . . 7  
 Clock Set/Adjustment . . . . . 8

**FIRST DRIVE FEATURES**

NISSAN Intelligent Key® System (if so equipped) . . . . . 9  
 Power Liftgate (if so equipped) . . . . . 10  
 Front Seat Adjustments . . . . . 10  
 2<sup>ND</sup> Row Seats . . . . . 11  
 3<sup>RD</sup> Row Seats (if so equipped) . . . . . 11  
 Outside Mirror Control Switch . . . . . 11  
 Starting/Stopping the Engine . . . . . 12  
 Headlight Control Switch . . . . . 12  
 Windshield Wiper and Washer Switch . . . . . 13  
 Automatic Climate Controls (if so equipped) . . . . . 14  
 FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped) . . . . . 15  
 Cruise Control . . . . . 16  
 USB/Aux Jack and iPod® Interface . . . . . 16  
 Power Panoramic Moonroof (if so equipped) . . . . . 17  
 Center Console Storage box . . . . . 17  
 Tilt and Telescopic Steering Wheel Adjustments . . . . . 17

**SYSTEM GUIDE**

Vehicle Information Display . . . . . 18  
 Bluetooth® Hands-free Phone System . . . . . 19  
     System Operating Tips . . . . . 19  
 Bluetooth® System without Navigation (if so equipped) . . . . . 19  
 Bluetooth® System with Navigation (if so equipped) . . . . . 20  
 Navigation System (if so equipped) . . . . . 22  
 HomeLink® Universal Transceiver (if so equipped) . . . . . 23



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **“Safety — Seats, seat belts and supplemental restraint system (section 1)”, “Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)”** and **“Starting and driving (section 5)”** of your Owner's Manual.



To view detailed instructional videos, go to [www.nissanownersinfo.mobi/2014/rogue](http://www.nissanownersinfo.mobi/2014/rogue) or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at [www.nissanusa.com](http://www.nissanusa.com).

# NEW SYSTEM FEATURES

## AROUND VIEW® MONITOR WITH MOVING OBJECT DETECTION (MOD) (if so equipped)

- With the ignition switch in the **ON** position, the Around View® Monitor is activated by pressing the **CAMERA** button **01**, located on the control panel, or by moving the shift lever to the **R (REVERSE)** position. The monitor displays various views of the position of the vehicle.



- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **01** is pressed, the following views will display in order:

Start from any Control Panel screen



Press



Front view & bird's-eye view



Press



Front view & front-side view



Press



- When the shift lever is in the **R (REVERSE)** position and the **CAMERA** button **01** is pressed, the following views will display in order:

Rear view & bird's-eye view



Press



Rear view & front-side view



Press

 


- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.


- Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).

- For information regarding how to access additional viewing cycles, please see your Owner's Manual.

- There are some areas where the system will not detect objects.
  - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **02**.
  - When in the bird's-eye view, a tall object near the seam of the camera detecting areas **03** will not appear in the monitor.
- The distance between objects viewed on the Around View® Monitor differs from the actual distance.
- Objects in the bird's-eye view will appear further than the actual distance.



**02**

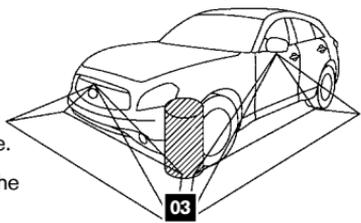

**03**

For more information, refer to the “Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)” of your Owner’s Manual.

## SPORT MODE

- In the **SPORT** mode, the engine and transmission are controlled to set the engine speed higher than in the **D (DRIVE)** position. This enhances throttle response for a sporty driving feeling.
- The **SPORT** mode switch **01** is located on the left side of the instrument panel.
- To turn the **SPORT** mode on, push the **SPORT** mode switch. The **SPORT** mode indicator light in the instrument panel illuminates. To turn the **SPORT** mode off, push the **SPORT** mode switch again. The **SPORT** mode indicator light on the instrument panel will extinguish.



**01**

For more information, refer to the “Starting and driving (section 5)” of your Owner’s Manual.

## BLIND SPOT WARNING (BSW) SYSTEM (if so equipped)

- The BSW system helps alert the driver of other vehicles in adjacent lanes when changing lanes.
- The system will operate when the vehicle is driven at speeds of approximately 20 MPH (32 km/h) and above.
- When the system detects a vehicle in the detection zone, the blind spot indicator light **01**, located near the outside mirrors, will illuminate. If the turn signal is then activated, the system chimes twice and the blind spot indicator light flashes to alert the driver. The blind spot indicator light continues to flash until the detected vehicle leaves the detection zone.
- Push the warning systems switch **02** to temporarily turn the system off. When the system is off, the indicator light **03** on the switch is off.
- The indicator light will also be off if all of the warning systems are deactivated using the settings menu.



**01**



**02**

**03**

For more information, refer to the “Instruments and controls (section 2)” and “Starting and driving (section 5)” of your Owner’s Manual.

# NEW SYSTEM FEATURES

## LANE DEPARTURE WARNING (LDW) SYSTEM (if so equipped)

- The LDW system helps alert the driver when the vehicle is traveling too close to either the left or the right side of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 45 MPH (70 km/h) and above, and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right of the traveling lane, the LDW system will chime and the orange LDW light **01** on the instrument panel will blink to alert the driver.
- The LDW system can be turned on and off through the settings menu in the vehicle information display. To temporarily turn off the system, push the warning systems switch **02**.
- When the system is off, the indicator light **03** on the switch is off.



For more information, refer to the “**Instruments and controls (section 2)**” and “**Starting and driving (section 5)**” of your Owner’s Manual.

## FORWARD COLLISION WARNING (FCW) SYSTEM (if so equipped)

- The FCW system will warn the driver with a help alert light and chime when the vehicle is getting close to a vehicle ahead in the traveling lane.
- The FCW system operates at speeds of approximately 10 MPH (15 km/h) and above.
- The warning systems switch **01** is used to turn on and off the forward collision warning system when it is activated using the settings menu on the vehicle information display.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

## HILL START ASSIST (HSA) SYSTEM

The HSA system allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

- The Hill Start Assist will operate automatically under these conditions:
  - The shift lever is shifted into a forward or a reverse gear.
  - The vehicle is stopped completely on a hill by applying the brake.
- The Hill Start Assist will not operate when the shift lever is in the **N (Neutral)** or **P (Park)** position or on a flat and level road.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

## HILL DESCENT CONTROL (HDC) SYSTEM (if so equipped)

The HDC system is designed to apply the brakes to help control the speed of the vehicle and reduce the workload of the driver while descending steep hills. To activate the system:

- The Hill Descent Control System switch **01** must be ON. To deactivate the Hill Descent Control System, push the switch **01** to the OFF position.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

# ESSENTIAL INFORMATION

## TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY FILL TIRE ALERT

- A **Tire Pressure Low - Add Air** warning message will appear in the vehicle information display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low in pressure and air is needed.
  - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- When adding air to an under-inflated tire, the TPMS with Easy Fill Tire Alert provides visual and audible signals outside the vehicle to help you inflate the tires to the recommended COLD tire pressure.
- To use the Easy Fill Tire Alert system:
  1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
  2. Place the ignition switch in the **ON** position. Do not start the engine.
  3. Add air to the under-inflated tire, and within a few seconds the hazard warning lights will start flashing.
  4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
  5. Repeat this procedure for any additional under-inflated tires.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **Tire Pressure Low - Add Air** warning message and low tire pressure warning light will extinguish.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
  - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to "Technical and consumer information (section 9)", in your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.



# ESSENTIAL INFORMATION

## LOOSE FUEL CAP

- A **Loose fuel cap** warning message will appear in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the  button, located on the steering wheel, is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

## FUEL-FILLER DOOR

- The fuel-filler door is located on the passenger side of the vehicle.
- To open the fuel-filler door, pull the release lever **01**, located on the instrument panel to the left of the steering wheel.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

## TOWING YOUR VEHICLE

- ALL-WHEEL DRIVE (AWD) VEHICLE (if so equipped)
  - An all-wheel drive vehicle must be towed with all wheels off the ground.
- For proper towing and to avoid accidental damage to your vehicle, NISSAN recommends that a service operator tow your vehicle after carefully reading the Owner’s Manual precautions.

For more information, refer to the “**In case of emergency (section 6)**” of your Owner’s Manual.

## OUTSIDE TEMPERATURE DISPLAY

- When the ignition switch is in the **ON** position, the outside air temperature will appear in the vehicle information display **01**.
- If the outside air temperature is below 25°F (-4°C), the outside temperature display will blink for 20 seconds then remain on when the ignition is switched on.
- If the outside air temperature is between 27°F and 37°F (-3°C and +3°C), the outside temperature display will blink continuously with the ignition switch in the **ON** position.
- To stop the outside temperature display from blinking, stop the vehicle in a safe place and move the shift lever to the **(P) PARK** position. Perform the following procedure:
  1. Press the  button on the steering wheel until the **Settings** mode is displayed.
  2. Turn the control button until it reaches the **Alarms** mode then press to select.
  3. Turn the control button until it reaches the **Outside temp** mode then press to select.
  4. Turn the control button until it reaches the **Off** mode then press to select.
  5. To exit, press the control button again.



## LOW OUTSIDE TEMPERATURE WARNING

- The **Low outside temperature** warning message will appear in the vehicle information display **02** when the outside temperature drops below 37°F (+3°C) with the ignition switch in the **ON** position.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

## DIVIDE-N-HIDE® ADJUSTABLE FLOOR (if so equipped)

- Do not place more than 30 lbs (13.6 kg) on the adjustable floor when it is in the upper position. Do not place more than 165 lbs (75 kg) on the adjustable floor when it is in the mid position.
- There are multiple positions for the adjustable floor. The upper position allows for additional storage below the adjustable floor **01**.

To move the adjustable floor from the lower position **02** to the upper position:

1. Use the handle to lift the adjustable floor.
2. Move the adjustable floor to the upper guide track and ensure it is secure in place.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.



# ESSENTIAL INFORMATION

## CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:


1. Press the **APPS**  button **01**
2. Touch the “Settings” key.
3. Touch the “System” key.
4. Touch the “Clock” key.

- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The date can be changed to one of 5 different formats.
- **Clock Mode:** From here the clock mode options are:
  - **Manual:** Allows for the option “Set Clock Manually”. Touch this to begin setting the clock manually using the “+” or “-” to adjust the hours, minutes, day and month up or down.
  - **Time Zone:** Touch the “Time Zone” key **02** to choose from the applicable time zone list, and/or touch “Daylight savings time” to switch between on and off.
  - **Auto:** Automatically sets the clock to the vehicles current location.

- Press the **BACK** button **03** to return to the previous screen.

For more information please refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual

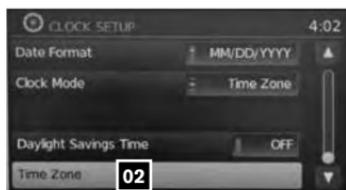


# FIRST DRIVE FEATURES

## NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The NISSAN Intelligent Key® System allows you to lock or unlock the vehicle, open your liftgate and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01**, push the liftgate opener switch **02** or press the  button **03** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
  - Push either door handle request switch **01** once or the liftgate opener switch **02** once; the corresponding door will unlock. Push the request switch again within 5 seconds; all other doors will unlock, or
  - Press the  button **04** on the key fob to unlock the driver's side door. Press the  button again; all other doors will unlock.

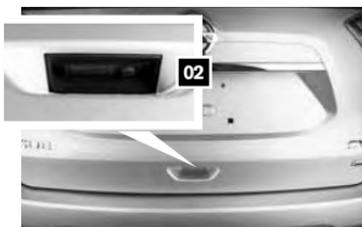

### LIFTGATE RELEASE

- To open the rear liftgate, press the  button **05** for longer than 1 second.
- To close the rear liftgate, press the  button **05** again for longer than 1 second.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **06** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.

### INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged, or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
  1. Move the shift lever to the **P (PARK)** position.
  2. Firmly apply the foot brake.
  3. Touch the ignition switch with the Intelligent Key and a chime will sound.
  4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

# FIRST DRIVE FEATURES

## POWER LIFTGATE (if so equipped)

- When the liftgate is closed and locked, the liftgate will open automatically by:

- Pushing the power liftgate switch **01** on the instrument panel.
- Pushing the liftgate opener switch **02**. The liftgate must be unlocked, or you must have the Intelligent Key with you (in your pocket or purse).
- Pressing the  button **03** on the NISSAN Intelligent Key® for more than 1 second.

- The power liftgate operation can be turned on or off by the power liftgate on/off switch **04** on the instrument panel.

- When the power liftgate on/off switch **04** is pushed to the **OFF** position, power operation is not available using the power liftgate switch **05** on the liftgate or the liftgate opener switch **02**.



## LIFTGATE POSITION SETTING (if so equipped)

- The liftgate can be set to open to a specific height by performing the following:
  1. Open the liftgate using the request switch or the Intelligent Key.
  2. Pull the liftgate down to the desired position and hold the liftgate (the liftgate will have some resistance when being manually adjusted).
  3. While holding the liftgate in position, press and hold the power liftgate switch **05** located on the liftgate for approximately 5 seconds or until 3 beeps are heard.
- The liftgate will open to the selected position setting. To change the position of the liftgate, repeat steps 1-3 for setting the position of the liftgate.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

## FRONT SEAT ADJUSTMENTS

- To slide the seat forward or backward, push the control switch **01** forward or backward.
- To recline the seatback, push the switch **02** forward or backward.

## SEAT LIFTER

- To raise or lower the front portion or height of the seat, push the front or back end of the switch **01** up or down.

## POWER LUMBAR SUPPORT

(if so equipped for driver’s seat)

- To adjust the seat lumbar support, push the front or back end of the switch **03**.



For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

## 2<sup>ND</sup> ROW SEATS

- To access the 3<sup>RD</sup> row seats, lift the seatback release lever **01** to fold and slide the 2<sup>ND</sup> row seat forward.
- Pull the release strap **02** to fold down the 2<sup>ND</sup> row armrest and access the cup holders.
- Pull the bar **03** and hold it while sliding the seat forward or backward to the desired position. Release the bar to lock the seat in place.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.




## 3<sup>RD</sup> ROW SEATS (if so equipped)

- To fold the seatback forward, pull the release strap **01** and push the seatback forward.
- To return the seatback to the upright position, pull the release strap **01** and the seatback up at the same time.

The 3<sup>RD</sup> row seats can fold forward for additional storage.


- Pull the handle **02** and lift the floor.
- Pull the straps **03** on both sides simultaneously, to unlatch the 3<sup>RD</sup> row seat.
- Lift the 3<sup>RD</sup> row seat to access the storage area beneath the 3<sup>RD</sup> row seat **04**.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

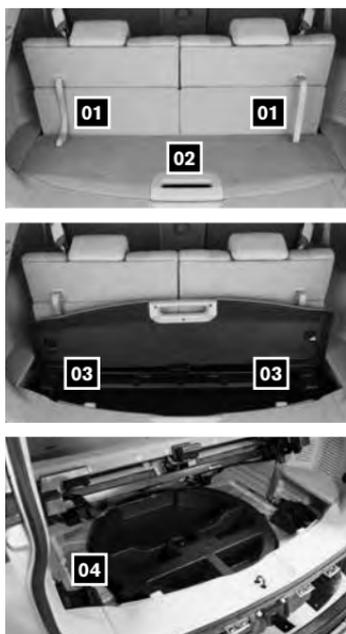

## OUTSIDE MIRROR CONTROL SWITCH

- Move the small switch **01** to select the right or left side mirror.
- Adjust each mirror to the desired position using the large switch **02**.
- To prevent accidentally moving the mirror, move the small switch **01** to the middle (neutral) position.

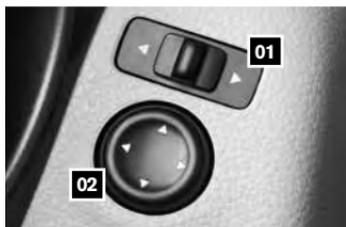

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

# FIRST DRIVE FEATURES

## STARTING/STOPPING THE ENGINE

- It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Push the ignition switch in.



## TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position, apply the parking brake and press the ignition switch.

## AUTO ACCESSORY


- With the vehicle in the **P (PARK)** position, the Intelligent key with you and the ignition placed from **ON** to **OFF**, the radio can still be used for a period of time, or until the driver's door is opened.

For more information, refer to the “Starting and driving (section 5)” of your Owner's Manual.

## HEADLIGHT CONTROL SWITCH

### HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **01** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.

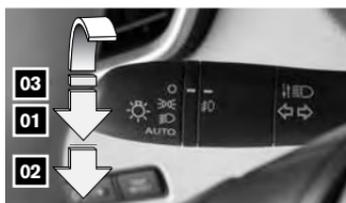

### AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then turn the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **01** or  position **02**.


### HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.



### FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

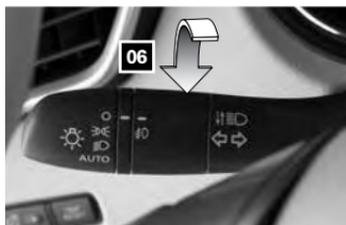

## LANE CHANGE SIGNAL

- To signal a lane change, move the lever up or down to the point where the indicator light begins to flash, but the lever does not latch.
- The turn signal will flash 3 times automatically.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

## WINDSHIELD WIPER AND WASHER SWITCH

- Move the lever to the following positions to operate the windshield wipers:


- 01** Mist  — One sweep operation of the front wipers.
- 02** Intermittent  — Front wipers operate intermittently. The intermittent operation speed can be adjusted by twisting the time control ring **03** to increase or decrease wiper speed.
- 04** Low  — Front wipers operate at a continuous low-speed.
- 05** High  — Front wipers operate at a continuous high-speed.

- 06** Front Washer  — Pull the lever toward you to activate the front washer. The front wipers will operate several times.



## REAR WINDSHIELD WIPER AND WASHER

- 07** Intermittent  — Rear wiper operates intermittently.
- 08** Low  — Rear wiper operates at a continuous low-speed.
- 09** Rear Washer  — Push the lever forward to activate the rear washer. The rear wiper will operate several times.

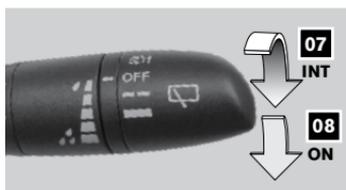

## WIPER BLADE REPLACEMENT PROCEDURE

The windshield wipers must be in the service position in order to replace the wiper blades. To move the wiper blades to the service position, follow this procedure:


- When the ignition switch is in the **ON** position or within 60 seconds of placing the ignition switch to the **OFF** position, push the windshield wiper and washer lever up to the Mist  position two times in less than 0.5 seconds. The windshield wipers will move to the service position automatically, and the wiper blades can now be replaced.

To move the wiper blades back to the original position:

- Pull the windshield wiper and washer lever up for more than 1 second or push the lever down to operate at any wiper speed.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.

# FIRST DRIVE FEATURES

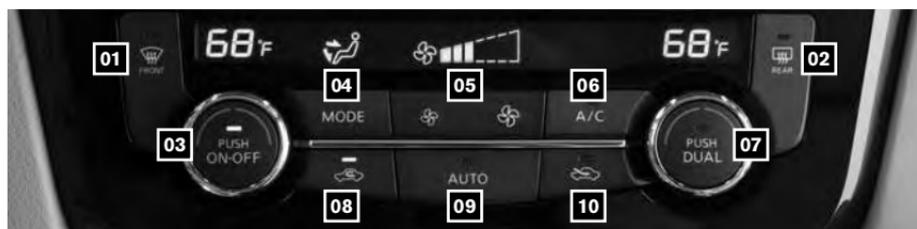

## AUTOMATIC CLIMATE CONTROLS (if so equipped)

### 01 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front window defroster mode  button. If it is difficult to defog the windows, press the **A/C** button **06**. This feature removes humidity from the air.
- Turn the temperature control dial left or right to set the desired temperature.
- To set the defroster on high, press both the fan speed  button **05** all the way up and the driver's side temperature control dial **03** all the way to the right.

### 02 DEFROSTING REAR WINDOW

- Push the rear window defroster  switch **02**. Push the switch again to manually turn the defroster off. This function automatically turns off after approximately 15 minutes.

### 03 ON-OFF BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- Push the **ON/OFF** button to turn the climate controls on or off. Turn the temperature control dial to the left for cooler air or right for warmer air.

### 04 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.

### 05 FAN SPEED CONTROL BUTTONS

- Press the fan speed control button  for low fan speeds or  for high fan speeds.

### 06 A/C ON-OFF BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

### 07 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

### 08 AIR RECIRCULATION BUTTON

- The air recirculation button is used to avoid outside odors.
- Press the air recirculation button  once to turn on and press again to turn off.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot outlet mode .

## 09 AUTO BUTTON

- Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

## 10 FRESH AIR INTAKE BUTTON

- Press the fresh air intake  button to draw outside air into the passenger compartment. The fresh air intake indicator light on the button will illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



## FM/AM/SiriusXM®\* SATELLITE RADIO WITH CD PLAYER (if so equipped)

### 01 VOLUME CONTROL KNOB/POWER BUTTON

- Turn the **VOLUME** control knob to the right or left to increase or decrease the volume.
- Press the **POWER** button to turn the system on or off.

### 02 TUNE/SCROLL KNOB/ENTER/AUDIO BUTTON

- To manually tune the radio, turn the **TUNE/SCROLL/AUDIO** knob left or right.
- Press the **ENTER/AUDIO** button to go to the audio settings screen.

### 03 SEEK BUTTONS

- To tune and stop at the next or previous broadcast station, press the seek buttons  or .
- For satellite radio, to switch to the first channel of the previous or next category, press the seek buttons  or .
- To change tracks on a CD, press the seek buttons  or .
- To fast forward or rewind a track on a CD, press and hold the seek buttons  or .

### 04 STATION SELECT BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **05** or **SXM** button **06** then tune to the desired FM, AM or XM satellite radio station.

\*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.

# FIRST DRIVE FEATURES

- Then press and hold the desired station select button (1-6) until a beep is heard and the sound is briefly muted. The channel indicator will appear on the display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (1-6).

For more information, refer to the “Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)” of your Owner’s Manual.

## CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/h). The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON-OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON-OFF** switch **01**. Both the **CRUISE** indicator light and **SET** indicator light in the instrument panel will extinguish.



For more information, refer to the “Starting and driving (section 5)” of your Owner’s Manual.

## USB/AUX JACK and IPOD® INTERFACE


- The USB/Aux jack **01** is located beneath the climate controls.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB/Aux jack, compatible audio files stored on the device can be played through the vehicle’s audio system.



For more information, refer to the “Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)” of your Owner’s Manual.

## POWER PANORAMIC MOONROOF (if so equipped)

- To fully open or close the moonroof, push the switch to the open position **01** or the close position **02** and release it. The roof will automatically open or close. To stop the roof, push the switch once more while it is opening or closing.
- To tilt the moonroof open, press the tilt button **03**. To close the moon roof, push the switch to the close position **02**.

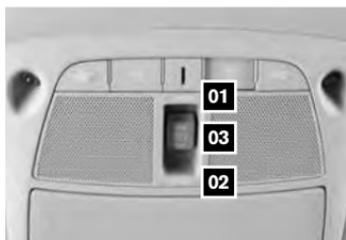

### AUTO-REVERSE

When the auto-reverse function is activated, the moonroof will automatically open or tilt up when the control unit detects something caught in the moonroof when the moonroof is closing or tilting down.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

## CENTER CONSOLE STORAGE BOX

- To access the top storage tray, pull up on the driver’s side lever **01**.
- To access the bottom storage bin, pull up on the passenger’s side lever **02**.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



## TILT AND TELESCOPIC STEERING WHEEL ADJUSTMENTS

Release the lock lever by pulling it down.

- Adjust the steering wheel forward or backward by moving it to the desired position.
- Adjust the steering wheel up or down to the desired position.

Lock the steering wheel in place by pushing the lock lever up firmly.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



# SYSTEM GUIDE

## VEHICLE INFORMATION DISPLAY

The vehicle information display **01** displays such items as:

- Vehicle settings
- Trip computer information
- Drive system warnings and settings (if so equipped)
- Audio information
- Navigation turn-by-turn
- Cruise control system information
- NISSAN Intelligent Key® operation information
- Indicators and warnings
- Tire pressure information



## USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed using the **02** button and the ENTER **03** buttons located on the steering wheel.

- Press **02** to change the display mode.
- Move the **03** switch up or down to navigate through the vehicle information display menu.
- Press **04** to change or select an item.
- Press **05** to go back to the previous menu.



## STARTUP DISPLAY

When the ignition is in the **ON** position, the vehicle information display will support four of the following modes:

- Active system status (if so equipped)
- Fuel economy
- Trip computer
- Warnings (if there are any)
- Tire pressure information

## RESETTING THE TRIP COMPUTER

1. Press the **02** button until you reach the trip computer mode.
2. Press the **02** button for more than 1.5 seconds to reset fuel consumption, average speed, distance to empty and journey time.
3. Pushing the **TRIP RESET** switch **06** for more than 1 second resets the currently displayed trip odometer to zero.

## SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:

- Driver Assistance
- Meter Settings
- Vehicle Settings
- Maintenance
- Alerts
- Tire Pressures
- Unit
- Language
- Factory Reset


For more information, refer to the **“Instruments and controls (section 2)”** of your Owner's Manual.

## BLUETOOTH® HANDS-FREE PHONE SYSTEM

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.\*

### SYSTEM OPERATING TIPS

- Press the  button to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button and after the tone say, "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a voice recognition session, say "Exit" or press and hold the  button.
- To decrease or increase the volume of the voice prompts, push the volume control switches  or  on the steering wheel or turn the **VOL/ON-OFF** control knob on the audio system while the system is responding.
- Voice commands can be used to operate various Bluetooth® System features using the NISSAN Voice Recognition system. See your Owner's Manual for detailed information.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode.
- For more detailed information and instructions, refer to your cellular phone Owner's Manual and visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).

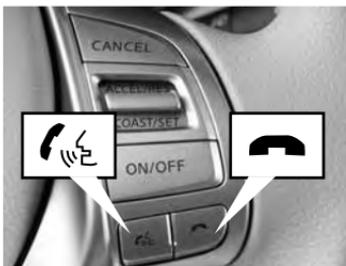

### Bluetooth® System without Navigation (if so equipped)

#### PAIRING PROCEDURE

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: "Connect Phone". The system acknowledges the command and announces the next set of available commands.
3. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate pairing from the phone.
  - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).
  - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.

\*Some jurisdictions prohibit the use of cellular telephones while driving.

# SYSTEM GUIDE

## PHONEBOOK REGISTRATION

- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone, such as phonebook, outgoing call logs, incoming call logs and missed call logs is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. See your cellular phone's Owner's Manual for more information.
- Up to 1,000 phone numbers per registered cellular phone can be stored in the phonebook.

## MAKING A CALL

1. Push the  button on the steering wheel. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: the registered person's name. The system acknowledges the command and announces the next set of available commands.
4. Say: "Yes". The system acknowledges the command and makes the call.

## RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button.
- To hang-up, press the  button.

## Bluetooth® System with Navigation (if so equipped)


- Send predefined or custom text messages\* through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® phone to play audio files from your device through your vehicle's audio system. Once your compatible cellular phone is connected to the vehicle's audio system, the audio files will play through the vehicle's speakers.

## SMARTPHONE INTEGRATION

- For information on how to pair your phone and use popular smartphone apps in your Nissan, please visit: [www.nissanusa.com/connect/support](http://www.nissanusa.com/connect/support).

## CONNECTING PROCEDURE

1. Press the **APPS**  button on the control panel.
2. Select the "Settings" key **01**.
3. Select the "Phone & Bluetooth" key **02**.

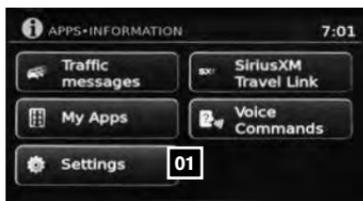

\*Laws in some jurisdictions may restrict the use of "Text-to-Speech." Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

- Select the "Connect New Device" key **03**.
- Initiate the connecting process from the handset.  
The system will display the message:  
"Is PIN XXXXXX displayed on your Bluetooth device?"  
If the PIN is displayed on your Bluetooth® device, select "Yes" to complete the connecting process.



## VEHICLE PHONEBOOK

To access the vehicle phonebook:

- Press the  button on the instrument panel.
- Select the "Phonebook" key **04**.
- Choose the desired entry from the displayed list.




## MAKING A CALL

- Press the  button on the instrument panel. The "Phone" screen **05** will appear on the display.
- Select one of the following options to make a call:
  - "Phonebook": Select the name from an entry stored in the vehicle phonebook.
  - "Call Lists": Select the name from the incoming, outgoing or missed call history.
  - "Redial": Dial the last outgoing call from the vehicle.
  -  — Input the phone number manually using the keypad displayed on the screen.



## RECEIVING A CALL

- To accept the incoming call, either:
  - Press the  button on the steering wheel, or
  - Select the  icon on the screen.
- To reject the incoming call, either:
  - Press the  button on the steering wheel, or
  - Select the  icon on the screen.

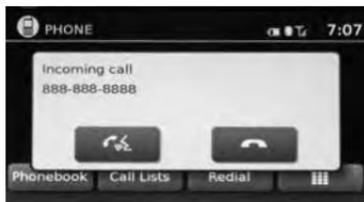

For more information, refer to the "Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

# SYSTEM GUIDE



## NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- NissanConnect™ Apps integrates popular smartphone apps and services into your vehicle. NissanConnect™ Apps requires a subscription. Please visit [www.nissanusa.com/connect](http://www.nissanusa.com/connect) for more information.

**01 NAV** button – Press to access the functions of the Navigation System.

**02 MAP** button – Press to display the current location map screen.

**03 VOL** knob – Turn right to increase the volume or left to decrease the volume.

**04**  key – Select to zoom the map in.

**05**  key – Select to zoom the map out.

**06 APPS**  button – Press to access Traffic messages, MyApps, SiriusXM® Travel Link, Voice Commands, and Settings.

**07**  button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **SCROLL** knob. Press and hold to turn the display off. Press again to turn the display on.

**08**  **BACK** button – Press to return to the previous screen.

**09 SCROLL** knob – Turn to scroll through the items in a list. Press to select a menu item.

**10** Touch screen display.

**11** SD-card location - An SD-card with map data must be inserted here for map functions to operate.

For more information, refer to your Navigation System Owner's Manual.



## HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink system can learn and consolidate the functions of up to 3 different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
  - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
  - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
  - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
  - A solid continuous light indicates the programming is complete and the HomeLink button will activate your device.
  - A blinking light that turns to a solid continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
  - At the receiver of the device that you are programming to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
  - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous 2 steps up to 3 times to complete the programming process. HomeLink should now activate your device.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual, the HomeLink website at [www.homelink.com](http://www.homelink.com) or call 1-800-355-3515.

# MEMO

# MEMO

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide Owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by Nissan to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guide, Owner's Manuals and any updates can also be found in the Owner section of the Nissan website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in this Owner's Manual for contact information.



To view detailed instructional videos,  
go to **[www.nissanownersinfo.mobi/2014/rogue](http://www.nissanownersinfo.mobi/2014/rogue)**  
or snap this barcode with an appropriate barcode reader.

